

USER MANUAL FOR SCREEN AMP CONTROL PANEL WITH COVER KVV987189

I. -CHECK THE HANDELS IF THEY HAVE SIDE HOLES

- IF NOT, GO TO POINT II,III,IV AND V

- IF YES, THEN GO TO POINT V

II. - HOW TO TAKE HANDLES OFF OF THE AMPLIFIER

III. - HOW TO DRILL NEW HOLES (IF YOU HAVE OLDER VERSION OF THE HANDLES)


IV. - HOW TO PUT THE HANDLES BACK ON THE AMPLIFIER

V. - HOW TO NEW COVER SET IN (IF YOU HAVE NEW HANDLES)

II. - HOW TO TAKE OFF HANDLES

1. - LOOSEN BOLTS


2. - TAKE OUT THE HANDLES

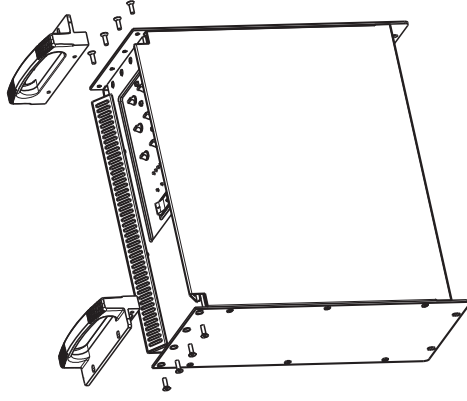

III. - HOW TO DRILL NEW HOLES (IF YOU HAVE OLD VERSION)

IF YOU HAVE OLD VERSION OF HANDLE, YOU MUST DRILL NEW HOLES INTO THE HANDLES


DRILL HOLES IN SAME AXIS LAKE A OTHER HOLES

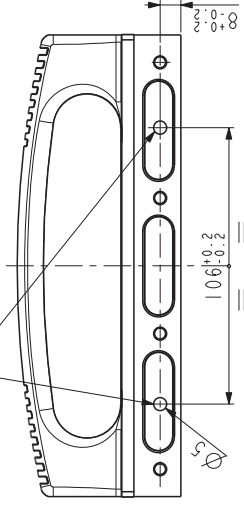

IV. - HOW TO PUT THE HANDLES BACK OD THE AMPLIFIER

1. - PUT THE HANDLES BACK

2. - TIGHTEN BOLTS

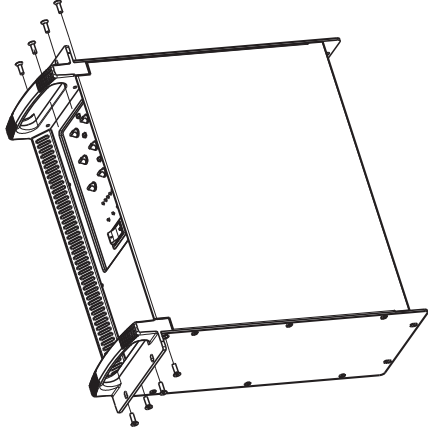


V. - HOW TO SET IN THE NEW COVER (IF YOU HAVE LATEST HANDLE VERSION)

1. - SLIDE INTO PLACE FIRM END OF THE COVER - A SIDE

2. - PULL THE SLIDING LATCH ON SIDE B OF COVER TOWARD THE CENTER OF COVER

3. - PUT DOWN SIDE B TO AN EVEN POSITION WITH HOLES IN HANDLE

4. - SHIFT IN THE SLIDING LATCH AND CONSTRICT THE SCREW

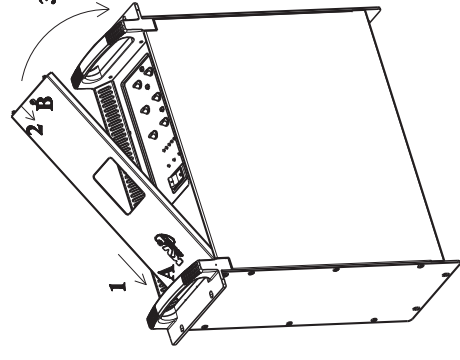

DETAIL A

DETAIL A
2:5

