



ESR3000D

User Guide



The Future of Sound. Made Perfectly Clear.

At KV2 Audio our vision is to constantly develop technologies that eliminate distortion and loss of information providing a true dynamic representation of the source.

Our aim is to create audio products that absorb you, place you within the performance and deliver a listening experience beyond expectations.

Important Safety Instructions

Before using your ESR3000D Amplifier, be sure to carefully read the applicable items of these operating instructions and the safety suggestions.

1. Read all product instructions.
2. Keep printed instructions, do not throw away.
3. Respect and review all warnings.
4. Follow all instructions.
5. Do not use this unit near water, in unprotected out door areas or in rain or wet conditions.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
8. Install in accordance with KV2 Audio's recommended installation instructions.
9. Do not install near any heat sources such as heat radiators, heat registers, stoves or other apparatus that produce heat.
10. Do not defeat the safety purpose of the grounding type plug. A grounding type plug has two blades and a third grounding connector. The third connector is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles. The AC mains plug or appliance coupler shall remain readily accessible for operation.
12. Only use accessories specified by KV2 Audio.
13. Unplug this Amplifier during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the Amplifier has been damaged in any way, such as when the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the Vents; rain or moisture has entered the Amplifier; the Amplifier has been dropped; or when for undetermined reasons the Amplifier does not operate normally.
15. Do not remove front or back panels. Removal of the panel will expose hazardous voltages. There are no user serviceable parts inside and removable may void the warranty.
16. An experienced user shall always supervise this professional audio equipment.

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE PANELS.
NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.**

WARNING: To prevent fire or electric shock, do not expose this equipment to rain or moisture.

SAFETY SUMMARY

To reduce the risk of electric shock, disconnect the Amplifier from the AC mains before installing audio cable. Reconnect the power cord only after making all signal connections. Connect the Amplifier to a two pole, three- wire grounding mains receptacle. The receptacle must be connected to a fuse or circuit breaker. Connection to any other type of receptacle poses a shock hazard and may violate local electrical codes. Do not allow water or any foreign object to get inside the Amplifier. Do not put objects containing liquid on or near the unit. To reduce the risk of overheating the Amplifier, avoid exposing it to direct sunlight. Do not install the unit near heat-emitting appliances, such as a room heater or stove. This Amplifier contains potentially hazardous voltages. Do not attempt to disassemble the unit. The unit contains no user serviceable parts, repairs should be performed only by factory trained service personnel.

Contents

Introduction	3
Introduction / Dimensions	3
Getting Started	4 - 5
Unpacking / Amplifier rack mounting / Cooling	4
AC Requirements	5
Front Panel	6
Rear Panel	7 - 8
Display menu description	9
Web-server	10
Remote management	11 - 14
Overview	11
Channels	12
Diagnostics	13
Settings	14
Specifications	15
Using the System	16 - 17
Full range setup	16
External subwoofer setup	17
Block Diagram	18
Warranty · Service	19
Notes	20

ESR3000D

VERY HIGH DEFINITION AMPLIFIER

ESR3000D - part number KVV 987 433 (250V)

KVV 987 432 (230V)

KVV 987 431 (115V)



Application

Specifically designed as the amplification and control elements for the ESR215 loudspeaker system in a 4RU mount module

- Fixed Installations
- Music venues
- Classical and opera concerts

Introduction


The ESR3000D is three-way, active control and amplification system specially designed for the KV2 Audio ESR215 full range series loudspeaker systems. It houses all signal processing and amplification, as well as providing control and crossover function for an external subwoofer cabinet, (utilizing an external amplifier). The ESR3000D powers the ESR215MkII. Each unit incorporates six amplifiers consisting of two 100-watt, Class AB, push pull, low intermodulation amplifiers for high frequencies, two 200-watt, Class AB, push pull, low intermodulation design for mids and two a 1000-watt, high-efficiency, current-enhancing switch mode technology amplifiers for bass. The ESR3000D stereo configuration powers two ESR cabinets accordingly.

Features


The amplifier compliment inside the ESR3000D Amplifier is as follows:

- High Frequency - 2x 100-watt, Class AB, push pull, low intermodulation design
- Mid Frequency - 2x 200-watt, Class AB, push pull, low intermodulation design
- Low Frequency - 2x 1000-watt, high-efficiency, current-enhancing switch mode


Front Panel:

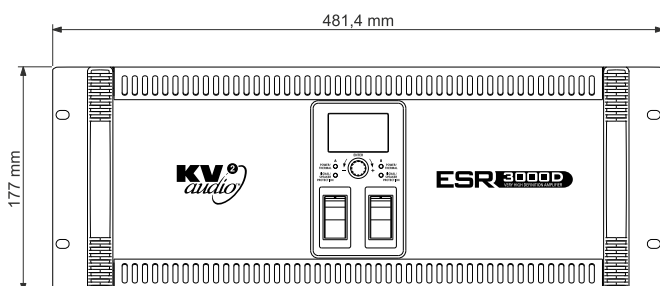

Rear Panel:

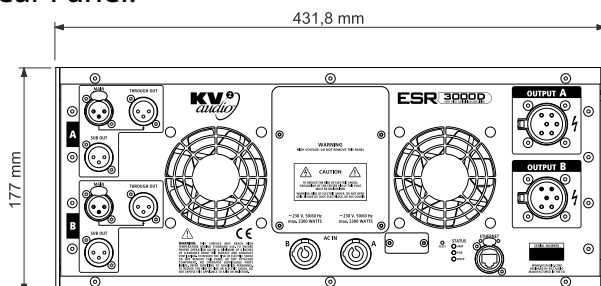

Side Panel:

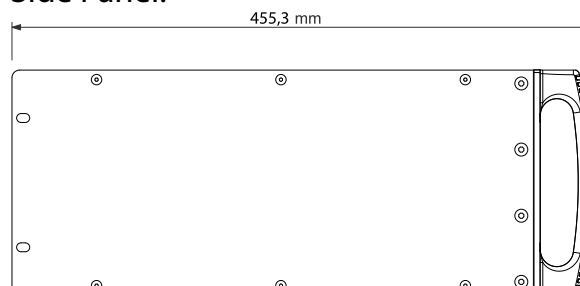

Unpacking

Unpack the ESR3000D Amplifier and check for any damage. If you find any damage, notify your supplier immediately. Only the consignee may institute a claim with the carrier for damage incurred during shipping. Be sure to save the carton and all packing materials for the carrier's inspection. Should you ever need to ship the unit, only use the original factory packaging. If the shipping carton is unavailable, contact your supplier to obtain a replacement.

The ESR3000D Amplifier carton should contain:

- ESR3000D Amplifier control unit
- This user guide
- Two PowerCon detachable power cables

Amplifier rack mounting

The ESR3000D Amplifier is 4 rack units in height and will mount in standard 19" rack systems. Integral rear mounting rack ears are also provided for additional support, do not rely on fixing and mounting the amplifier using just the front panel as support. Use eight screws and washers to mount the amplifier to the equipment rack rails. We recommend using a shock mounted rack for touring use to prolong the life of your amplifier.

Cooling

The ESR3000D Amplifier has a comprehensive cooling system featuring chassis sealed PCB board mounting and shock mounted, speed controlled fans. This means that the cooling system never drives air across PCB boards, connectors or components, ensuring prolonged electronic component lifespan and minimizing maintenance cycles.

Air is drawn into the front of the amplifier by the two fans on the rear panel, this passes over the cooling fans of the heat sinks and exhausts through the rear. If the heat sink gets too hot, its sensing circuit will open the output relay, disconnecting the load.

It is important to have an adequate air supply at the front of the amplifier, and enough space around the rear of the amplifier to allow the cooling air to escape. If the unit is rack mounted, do not use doors or covers on the rear of the rack, the exhaust air must flow without restriction. If you are using racks with closed backs, use fans on the rear rack panel to ensure an ample air supply.

IMPORTANT! Please note that for correct full performance of the unit AND ANY WARRANTY COVER, it is important that regular maintenance of the front vents and filters as well as the rear panel fans be inspected and cleaned by removing any dust and debris build-up. Any product failure due to lack of attention in this matter will immediately void any current warranty. (Please refer to notes re ventilation procedures).

AC Requirements

Two PowerCon cables are provided to connect the ESR3000D Amplifier to a suitable AC power supplies. Each cable powers each separate amplifier channel for sufficient current delivery.

THE ESR3000D REQUIRES A GROUND CONNECTION. ALWAYS USE A GROUNDED OUTLET AND PLUG.

The PowerCon is a connector without breaking capacity, i.e. the PowerCon should not be connected or disconnected under load or while it is live. Always isolate your AC supply before disconnecting the PowerCon connector.

The ESR3000D amplifier operates in either 115V, 230V or 250V modes. Although pre-configured at the factory, the unit's operating voltage mode can be changed in the field. Amplifier power plug must remain readily operable.

Your amplifier will be supplied preset to the voltage used in your area. The table below provides typical current draw figures for the ESR3000D Amplifier.

The receptacle must be connected to a fuse or circuit breaker. Connection to any other type of receptacle poses a shock hazard and may violate local electrical codes.


Do not allow water or any foreign object to get inside the amplifier. Do not put objects containing liquid on or near the unit. To reduce the risk of overheating the amplifier, avoid exposing it to direct sunlight.

Do not install the unit near heat-emitting appliances, such as a room heater or stove. This amplifier contains potentially hazardous voltages. Do not attempt to disassemble the unit. The unit contains no user serviceable parts, repairs should be performed only by factory trained service personnel.

AC Input	Current draw with amplifier running at Average Power (Each Channel)	Current draw with amplifier running at Peak Power (Each Channel)
250V	3.2A	5A
230V	3.5A	5.4A
115V	7A	11A

Current draw of ESR3000D Amplifier

Front Panel

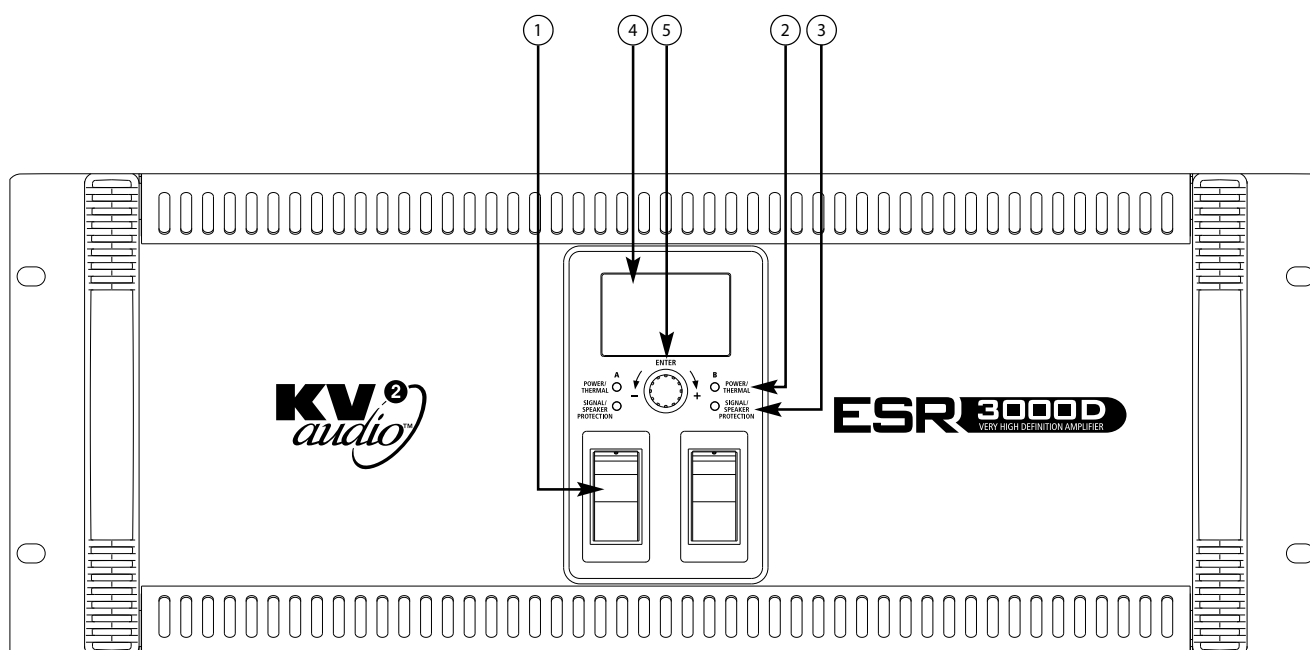

1) AC Mains Switch

The ESP3000D has combination AC mains switch/circuit breakers on the front panel. If either of the switches shut off during normal use, push it back to the ON position once. If it will not stay on you should take the unit to qualified service personnel to have it serviced..

2) Power / Thermal

These are dual colour LED's. When green they indicate that the Power Switch is ON and that channel of the amplifier is powered up. When red they indicate that that channel has overheated and shut down. The unit will Auto Reset after it cools down to a safe operating temperature.

3) Signal / Speaker Protection

Indicator These are dual colour LED's. When green they indicate that signal is present at the Input to that particular channel of the amplifier. When yellow they indicate that the audio speaker protection limiter has been activated for that particular channel of the amplifier.


4) Display

Shows the set parameters and allows settings of various functions in the menu.

5) Rotation encoder with Enter push-button

The encoder serves as the main way for increasing (clockwise), or decreasing (counter clockwise) values and menu positions. The encoder also serves as the ENTER (PUSH) button, allowing the operator to enter/leave the submenu in the main menu.

Rear Panel

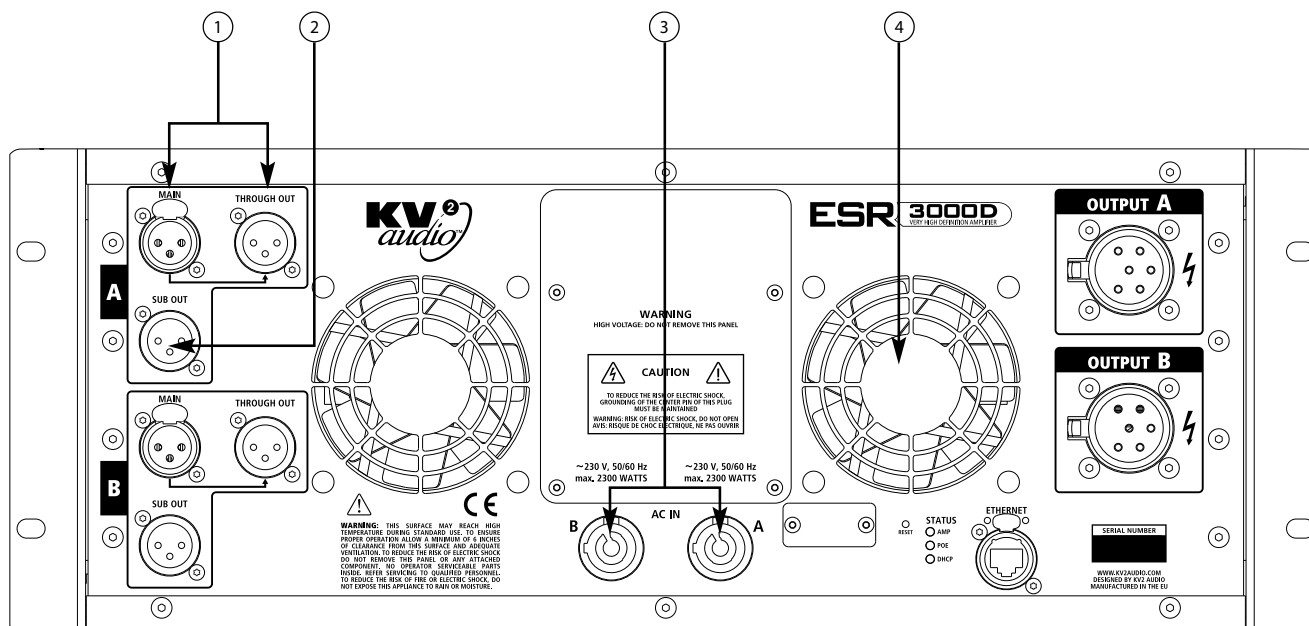

1) Main Input / Through Out

These are the input XLR connectors for channel A & B with associated 'Through Output' connectors for sending signal to other devices.

2) Sub out Balanced XLR output connector

Sub out Balanced XLR output connector, crossed over LPF, used to connect additional subwoofers. The output is still active even when FULL RANGE mode is activated.


3) PowerCon Power Connector

The ESR3000D Amplifier uses two connectors per two channel. Each connector supplies one channel. They accept standard PowerCon terminated AC Mains cables.

4) Fans

The cooling fans operate continuously while the ESR3000D is on. An internal temperature sensor increases the speed of the fans during high temperature conditions. Air enters through the front grille and exits through the rear. Be sure to allow adequate air flow to the front of the rack in which the ESR3000D is mounted.

Rear Panel

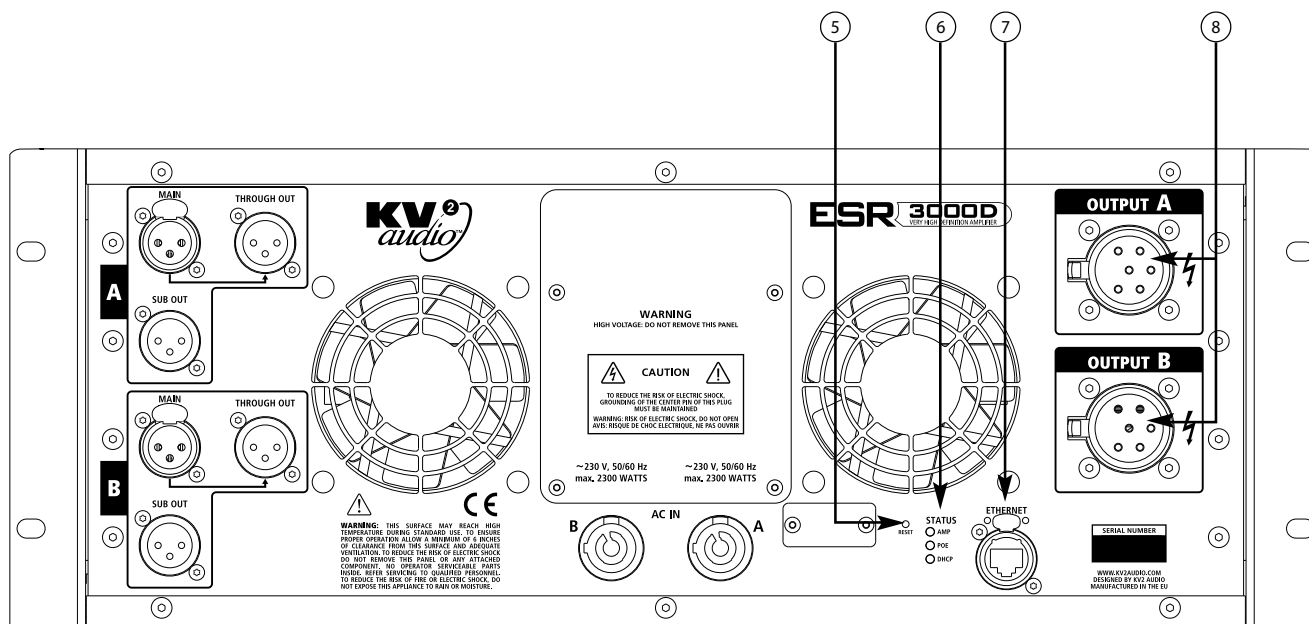

Communication

5) Reset

Serves as factory reset button. Resets all setup, including network settings (default settings AutoIP/DHCP). Use a tool with maximum diameter 2mm.

6) Status

LEDs indicates amplifier and amplifier diagnostics status, these are:

AMP

Dual colour LED. When green, it indicates that the power amplifier is powered up and all monitored parameters are OK. When red, it indicates that amplifier is off, or some problem with the amplifier has occurred, more information can be obtained via Ethernet.

POE

When green, it indicates that the diagnostics unit is powered via Power over Ethernet device.

DHCP

When green, it indicates that the diagnostics Ethernet IP address is assigned from the DHCP server.

7) Ethernet connector

Serves as an external communication port supporting Ethernet standard, accepts RJ45, T-658B wiring. The ESR3000D provides web-server and SNMP (Simple network management protocol). When the Ethernet cable is connected and devices successfully establish a connection, the green LED is activated. When Ethernet communication is in progress, the orange LED flashes.

8) Speaker AP6 Connectors

Accepts a standard AP6 terminated loudspeaker cable for connecting up to a single ESR215MkII cabinet. We recommend using 2.5mm/core cables

Display menu description

The ESR3000D has four main display screens for indication and setup. Main screens are: MAIN - for input levels and mutes. SUB for subwoofer output levels and mutes. SETUP for SUB MONO mode, FULL RANGE mode and factory reset. NET for network IP address and name indication.

MAIN

MUTE

Mute switch set channel A&B mute on / off.

VOL

Sets the amplifier input sensitivity in range from -24 to +6 dBu with 0,5dB steps.

BAND MUTE

Mute switch set LOW, MID, HI band mute on / off.

MAIN		SUB	SETUP	NET
CH	MUTE	VOL	BAND	MUTE
A		0.5dB		
B		0.0dB		
			LOW	MID HI

MAIN		SUB	SETUP	NET
CH	MUTE	VOL	BAND	MUTE
A	●	0.5dB	●	●
B	●	0.0dB	●	●
			LOW	MID

SUB

MUTE

Mute switch set SUB OUT
A&B output mute on / off.

VOL

Sets the SUB OUT level in range
from -24 to +6 dBu with 0,5dB step.

MAIN		SUB	SETUP	NET
CH	MUTE	VOL		
A		0.0dB		
B		0.0dB		

MAIN		SUB	SETUP	NET
CH	MUTE	VOL		
A	●	0.0dB		
B	●	0.0dB		

SETUP

SUM MONO

Switch, sets SUB OUT outputs summing SUB OUT outputs channel A and B together.

FULL RANGE

Switch, selects the amplifier crossover setup, when ON full range signal is reproduced by ESR215 cabinets, when OFF signal is by frequency band in conjunction with the subwoofer output setup. Internal crossover frequency is 70Hz.

FACTORY RESET

Resets the ESR3000D amplifier channels settings to factory default. Device identification, Security and Network setup may be reset using the rear panel reset button.

MAIN		SUB	SETUP	NET
SUB MONO				OFF
FULL RANGE				OFF
FACTORY RESET				→

NET

NAME: Displays amplifier name.

IP: Displays assigned network address.

MASK: Displays assigned network subnet mask.

Amplifier name and IP address may be changed using web-server.

MAIN		SUB	SETUP	NET
NAME: ESR1				
IP: N/A				
MASK: N/A				

ESR3000D Web-server

The ESR3000D web-server is accessible using a standard web browser on PC or mobile device. The appropriate ESR3000D network address must be set to access web-server. The web-browser device IP address must be set from the same network range and must be connected into the same network.

IP addresses are assigned to networked devices when they are configured for a specific network. The way that they are assigned can be static or dynamic.

The ESR3000D network address may be set several ways:

Auto IP

(Default) *Automatic Private IP Addressing*, is a method of automatically assigning IP addresses to networked devices. A networked device configured to use Auto IP first makes a request to a DHCP server for an address. If the device does not receive an IP address, which happens when there is no DHCP server on the network or when the DHCP server is not responding, the device assigns itself an address. Auto IP addresses always follow this pattern: **169.254.x.y**, where **x** and **y** are any two numbers between 0 and 255. Unlike DHCP, Auto IP does not require a router or a separate server to assign an IP address. The selected IP address is displayed on display - section NET, or can be obtained using the KV2 diagtool software.

DHCP

Dynamic Host Configuration Protocol. A DHCP server enables network devices to request IP addresses and networking parameters automatically from the DHCP server, reducing the need for a network administrator or a user to manually assign IP addresses to all network devices. The assigned IP address is displayed on display - section NET, or can be obtained using the KV2 diagtool software.


It is important to know that a dynamic IP address can change. If a network device with a dynamic IP address suddenly stops responding at its IP address, it is possible that it has obtained a new lease and its address has changed.

Static

A static IP address must be manually assigned to a network device. This address is typed by the person who sets up devices on the network, and it never changes. A static IP address changes when the person who administers the network specifically changes it.

Web-server page

Open the ESR3000D web-server, use the ESR3000D IP address, which is shown on display - section NET, or can be obtained using the KV2 diagtool software.

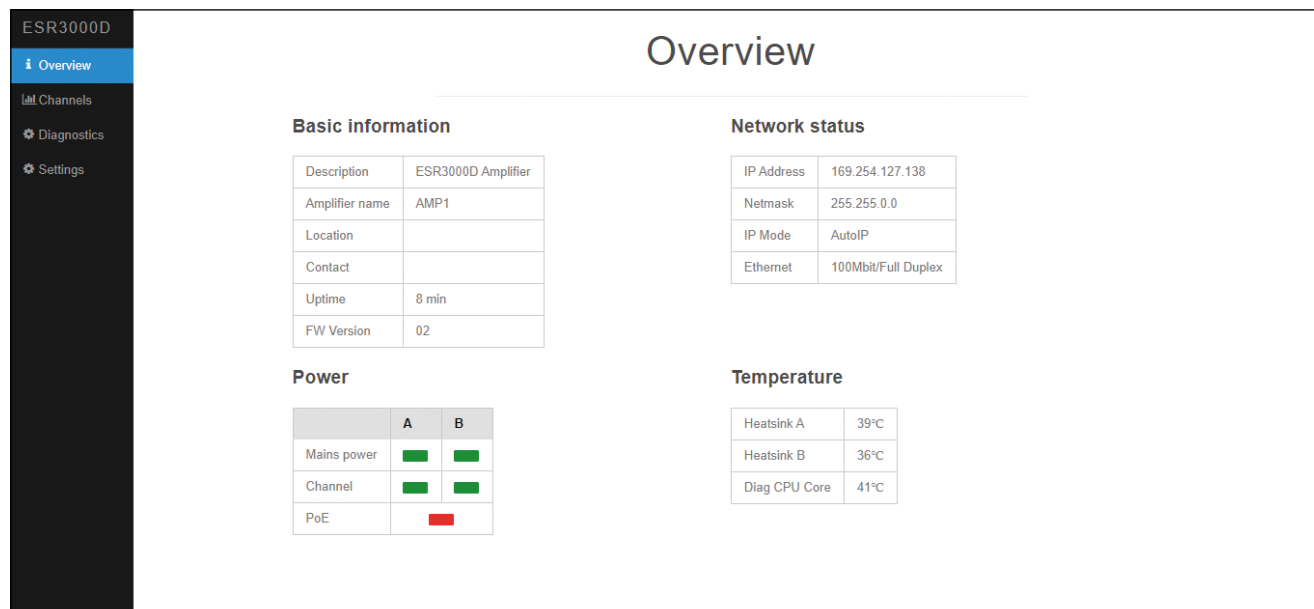

ESR3000D

Overview

Basic information

Description	ESR3000D Amplifier
Amplifier name	AMP1
Location	
Contact	
Uptime	8 min
FW Version	02

Network status

IP Address	169.254.127.138
Netmask	255.255.0.0
IP Mode	AutoIP
Ethernet	100Mbit/Full Duplex

Power

	A	B
Mains power	■	■
Channel	■	■
PoE	■	

Temperature

Heatsink A	39°C
Heatsink B	36°C
Diag CPU Core	41°C

Overview

Shows the amplifier basic information.

Basic Information

Shows the information assigned by user of the amplifier: Description, Amplifier name, Location, Contact, Uptime and Firmware revision.

Network status

Shows the amplifier ethernet network address, netmask, mode and status.

Power

Shows the amplifier power sources status: Mains power A & B , Channel A & B power sources, Power over Ethernet (PoE).

Temperature

Shows the amplifier channel A & B heat sinks temperatures and Diagnostic CPU temperature.

ESR3000D

Overview

Channels

Diagnostics

Settings

Channels

Control

	A	B
Fullrange	ON	
SUB Mono	OFF	
Mute		
Input level	- 0 dB +	- 0 dB +
SUB level	- 0 dB +	- 0 dB +
Band mute	SUB	LOW
	MID	HI

Diagnostics

	A	B
Mains voltage	247V	247V
Signal		
Speaker protection		
Temperature	39°C	36°C
Output voltage LOW	0V	0V
Output current LOW	0A	0A
Calculated impedance LOW	LowSIG	LowSIG
Output voltage MID	0V	0V
Output current MID	0A	0A
Calculated impedance MID	LowSIG	LowSIG
Output voltage HI	0V	0V
Output current HI	0A	0A
Calculated impedance HI	LowSIG	LowSIG

Channels

Shows the amplifier control parameters and amplifier diagnostics information.

Control

Changes the amplifier A&B control parameters, Full range (ON or OFF) , SUB Mono (ON or OFF), Mute (RED = amplifier muted), Input level (-24 to +6 dB), SUB level (-24 to +6 dB), Band mute (SUB, LOW, MID, HI mute ON or OFF)

Diagnostics

Shows amplifier diagnostics information.

Mains voltage

Signal

Green when input signal is present.

Speaker protection

Orange when speaker protection hits.

Temperature

Shows the amplifier channel A & B heat sinks temperatures.

Output voltage

Shows the amplifier speaker output voltages.

Output current


Shows the amplifier speaker output currents.

Calculated impedance

Shows the amplifier speaker output connected speaker impedances.

ESR3000D · Remote management

12

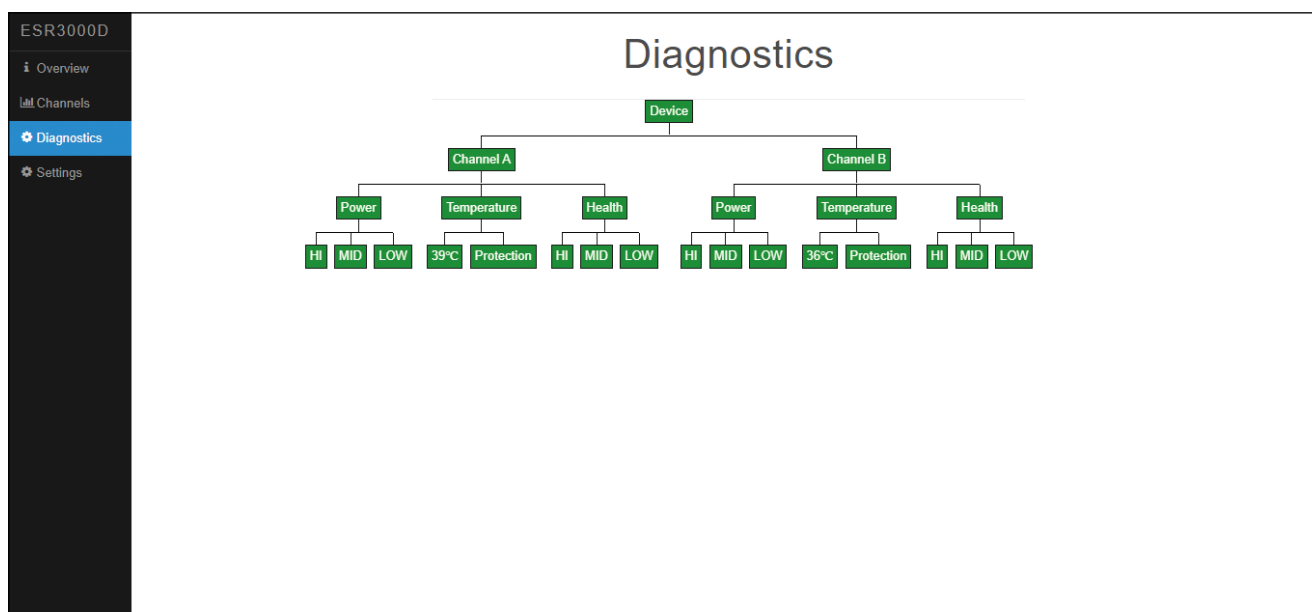

Diagnostics

Shows the ESR3000D amplifier and its components diagnostics information. Dual colour - Green = OK / Red = no power or some problem occurs.

Device

Sums ESR3000D diagnostics together

Channel A & B

Sums amplifier channel diagnostics information: Power source, Temperature, Health (amplifiers A & B LOW, MID, HI are working OK with dedicated gain).

Temperature

Displays amplifiers heat sinks A & B temperatures (°C).

Protection

When red they indicate that that channel has overheated and shut down. The unit will Auto Reset after it cools down to a safe operating temperature.

ESR3000D

Overview

Channels

Diagnostics

Settings

Settings

Device identification

Device name

AMP1

Location

Contact

Apply

Security

User name

admin

Password

Password confirm

Apply

Network

IP Mode

AutoIP/DHCP (default)

Apply

Settings

Shows and sets the device information, web-server password, network address.

Device identification

Shows and sets the device local information, Device name, Location, Contact.

Security

Sets name and password for web-server security (default User name: admin, default Password: admin)

Network

Sets the Ethernet IP mode. AutoIP/DHCP (default). Static (IP address and netmask must be set).

Specifications

Output Channels

Number of Channels	2 (stereo)
Total Output Power	2x 1300W

High Frequency Amplifier Specification

Type	Class AB - Push Pull - Low IM Design, Transformer balanced output
Rated Continuous Power	100W
Distortion	<0.02%
Operating Bandwidth	2.5kHz to 40kHz

Mid Frequency Amplifier Specification

Type	Class AB - Push Pull - Low IM Design, Transformer balanced output
Rated Continuous Power	200W
Distortion	<0.02%
Operating Bandwidth	400Hz to 2,5kHz

Low Frequency Amplifier Specification

Type	High efficiency, Current-enhancing switch mode
Rated Continuous Power	1000W
Distortion	<0.02%
Operating Bandwidth	20Hz to 400Hz

Signal Input

Input Sensitivity	1.55V RMS
Input Impedance	20k Ω (balanced)

Speaker Output

Speaker Output	2x AP6 female
----------------	---------------

Features

Network	Ethernet: SMNP, Webserver
---------	---------------------------


Power

Power Connector	2x Neutrik PowerCon®
Operating Voltage	115V / 230V / 250V
Operating Voltage Range	100 to 120V@60Hz 205 to 240V@50Hz 225 to 260V@50Hz
Recommended Amperage	2x10A 115V 2x5A 230V 2x5A 250V


Physical Dimensions

Height	177 mm (6.97"), 4RU
Width	481.4 mm (18.95")
Depth	455.3 mm (17.93")
Weight	39 kg (86lbs)

Full range setup

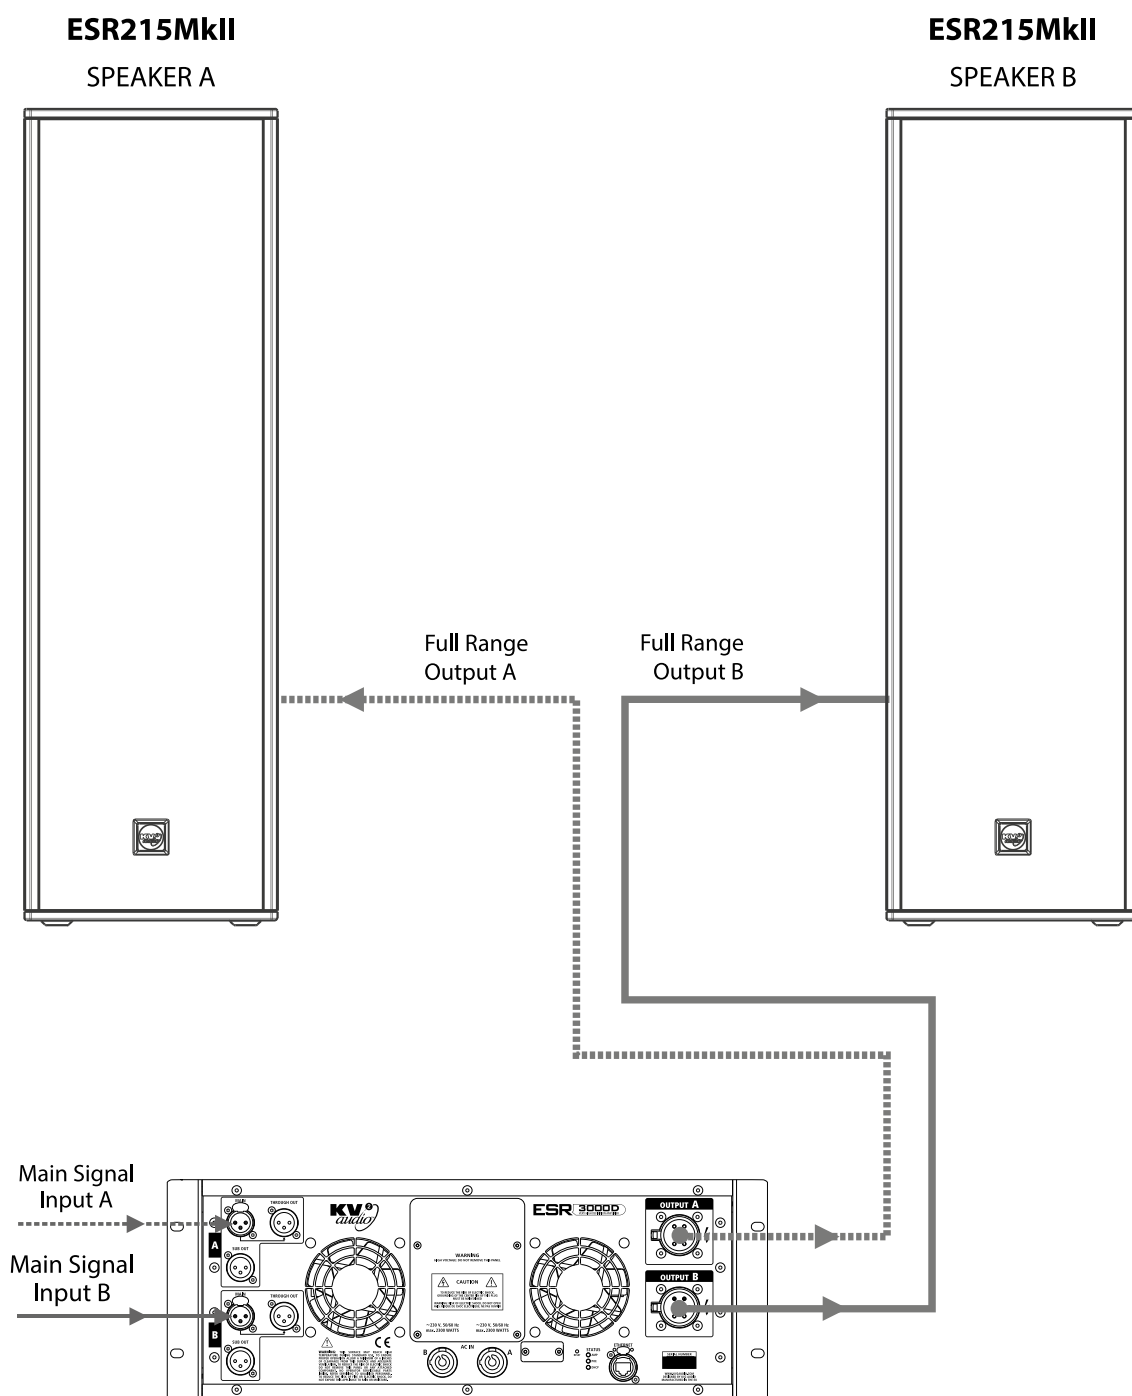

External subwoofer setup

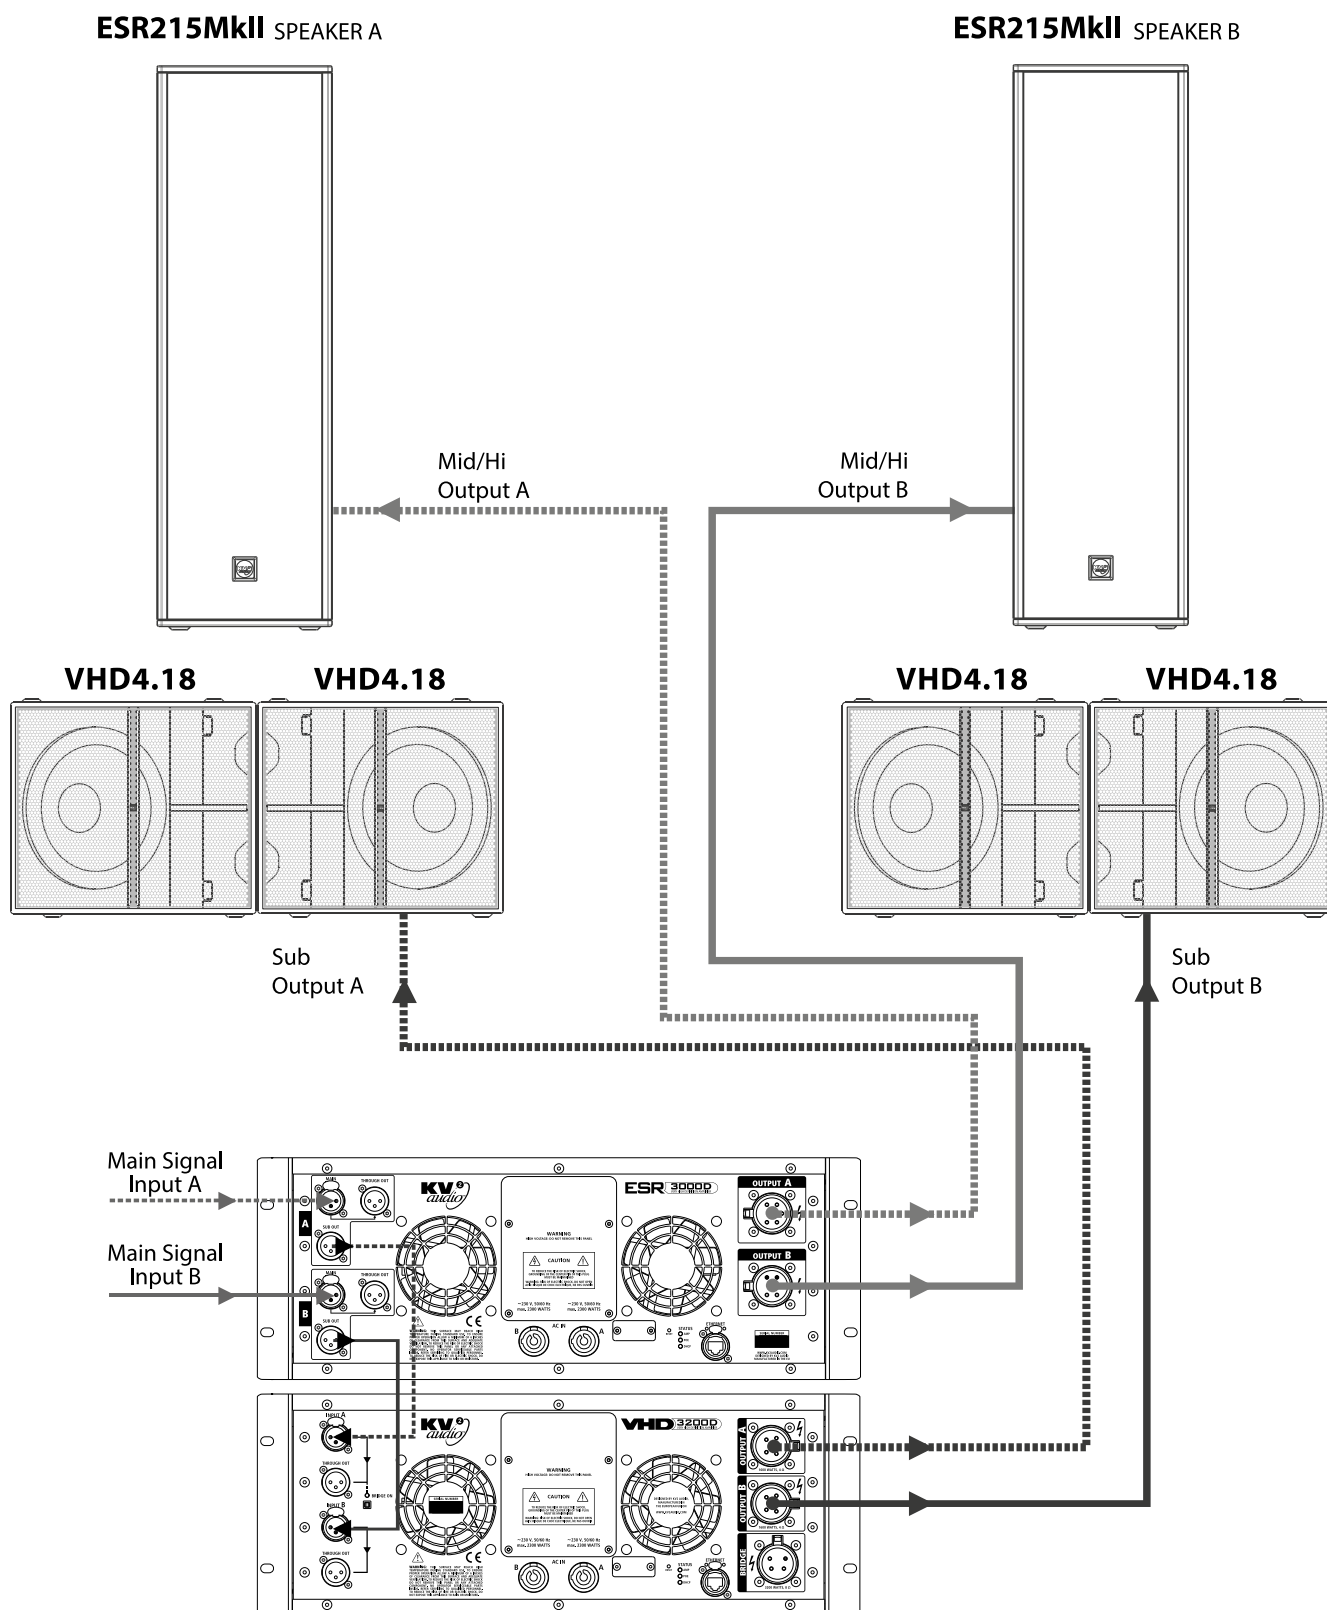


Set ESR3000D Amplifier to FULL RANGE OFF mode. Signal is crossed over at Hi/Mid for ESR215MkII cabinets and SUB for external subwoofer.

SUB SET UP LEVEL setting depends on which subwoofer unit is used.

ESR3000D · Block Diagram

ESR3000D Block Diagram

Channel A, channel B is identical

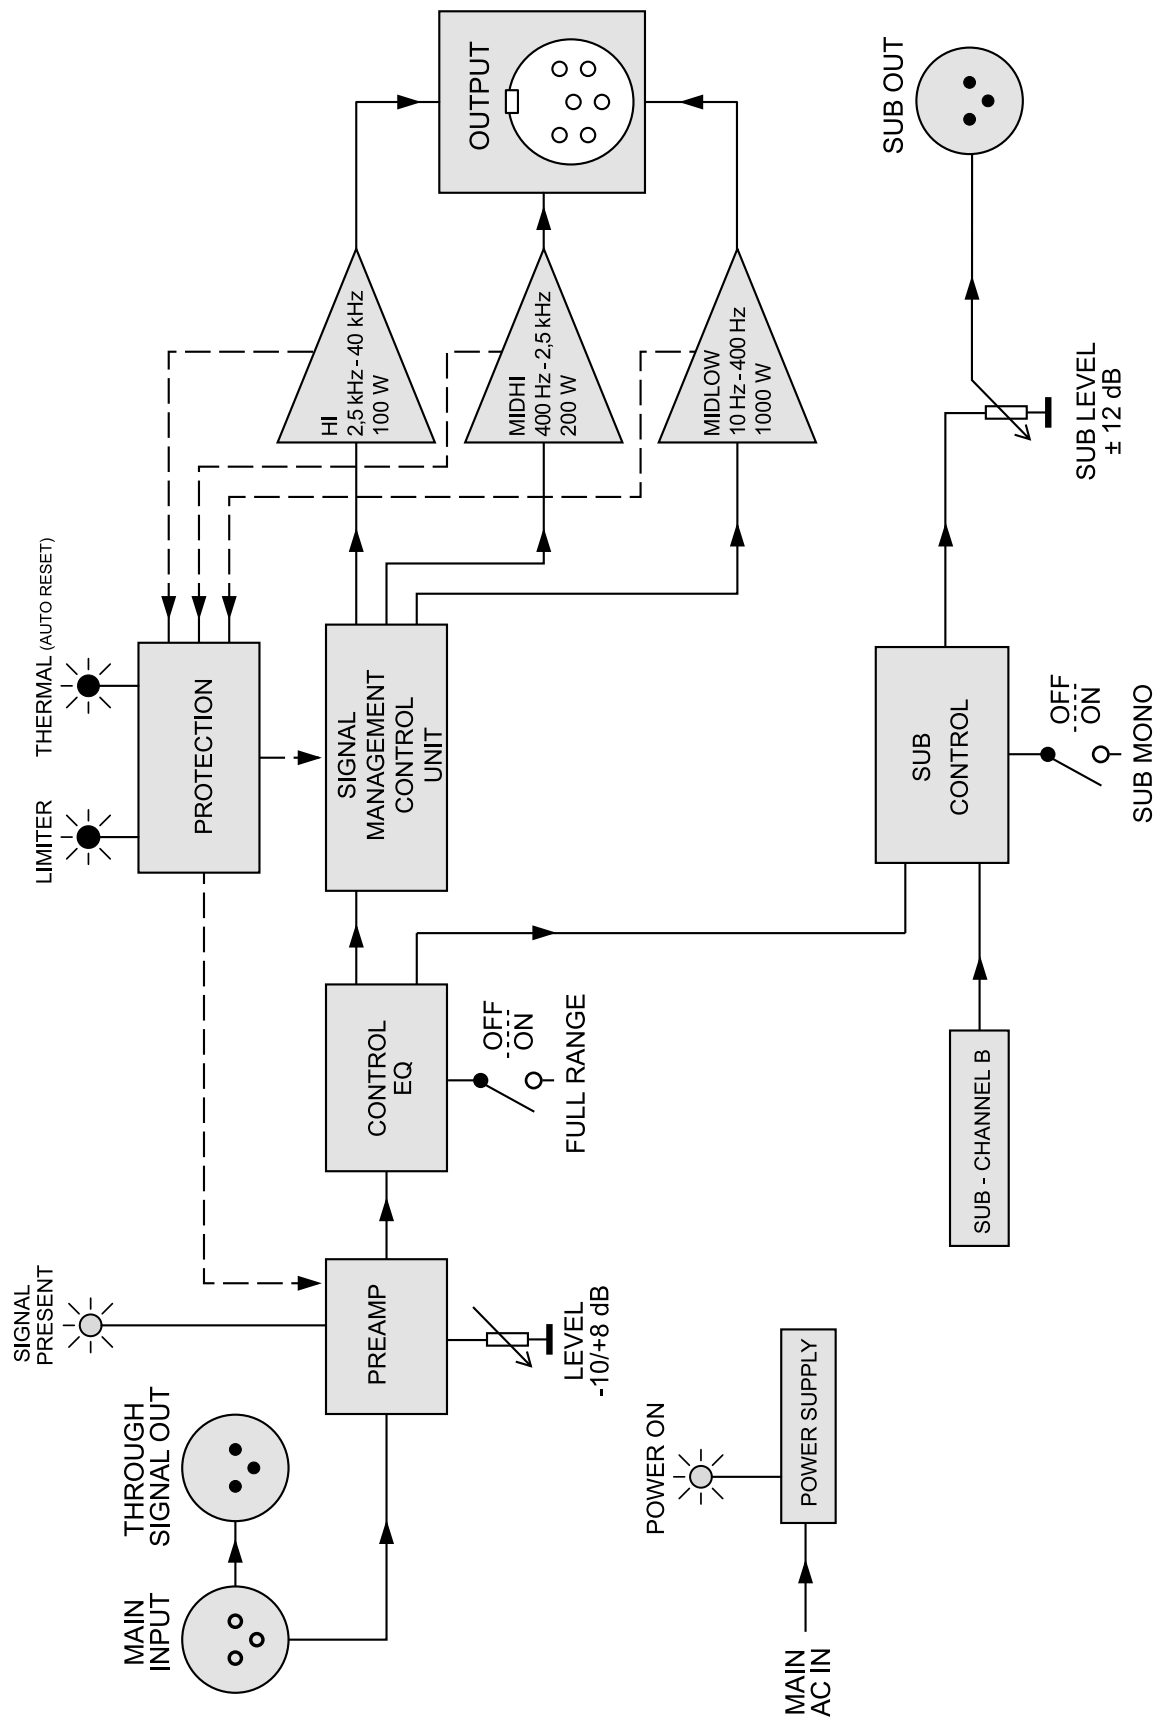

Warranty

Your ESR3000D is covered against defects in material and workmanship.

Please refer to your supplier for more details.

Service

In the unlikely event that your ESR3000D develops a problem, it must be returned to an authorized distributor, service centre or shipped directly to our factory. Because of the complexity of the design and the risk of electrical shock, all repairs must be attempted only by qualified technical personnel.

If the unit needs to be shipped back to the factory, it must be sent in its original carton. If improperly packed, the unit may be damaged.

To obtain service, contact your nearest KV2 Audio Service Centre, Distributor or Dealer.



The Future of Sound.
Made Perfectly Clear.

KV2 Audio International

Nádražní 936, 399 01 Milevsko
Czech Republic

Tel.: +420 383 809 320

Email: info@kv2audio.com

www.kv2audio.com

KVV120151-00-01-0